


To install the Glove Caddy:

1. Remove backing from adhesive tape.
2. Center the Glove Caddy on top of the tube arm, near the tower, with the curved opening pointing toward the tube. See Fig. 1.
3. Press firmly in place.

Fig. 1

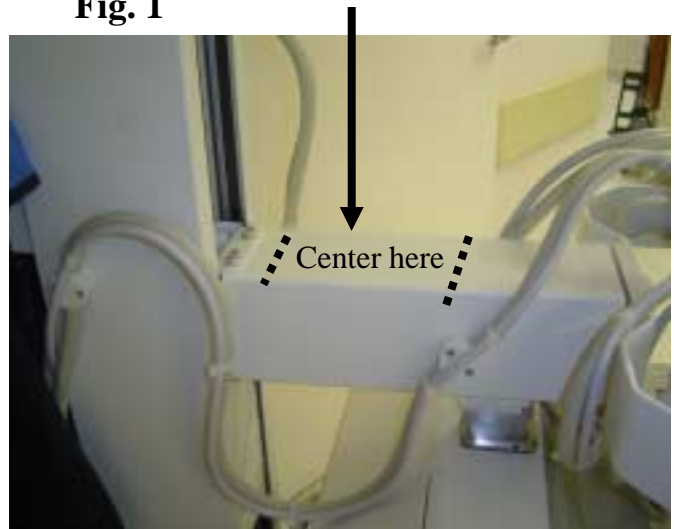

To install the Grid Caddy:

1. Remove screw on the side you are installing the Grid Caddy. See Fig. 2.
2. Slightly separate the side panel from the machine. See Fig. 3.
3. Slide the top lip of the Grid Caddy over the top of the side panel.
4. Slide the Caddy into place, centering it to the side of the machine.
5. Push the side panel back in place and replace screw.
6. Remove backing from adhesive tape on bottom of the Grid Caddy.
7. Press firmly in place.

Fig. 2.

Screw



Fig. 3.

Pull out.



Fig. 4.

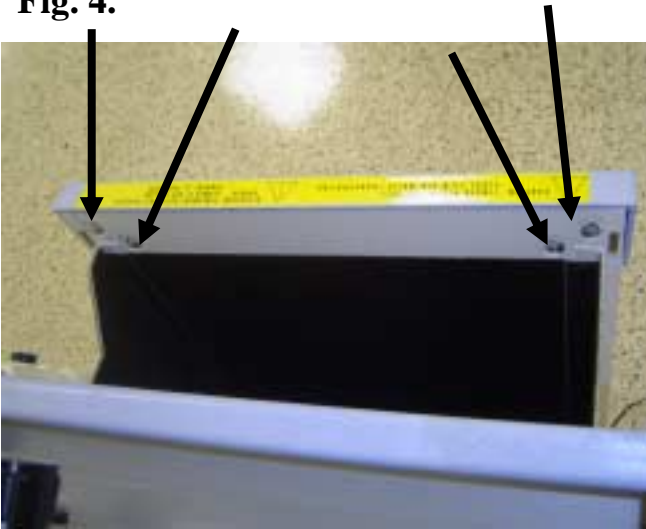


Fig. 5.



NOTE: If you purchased a DT2 for an AMX4 machine and the part is too long, try removing the extension from the bottom of the Door Caddy. If you still have any questions, please call 585-392-4336.

To install the Door Caddy:

1. Loosen, but not remove, the 4 screws inside the film bin that secure the door handle. See Fig. 4.
2. Close the door and slide the top edge of the Door Caddy under the blue handle.
3. Slide the Door Caddy up, and then drop into place with the lower edge behind the rubber strip at the bottom. See Fig. 5.
4. Re-tighten the screws to secure the film bin handle.

